




# WINDOW SWITCH LEDS

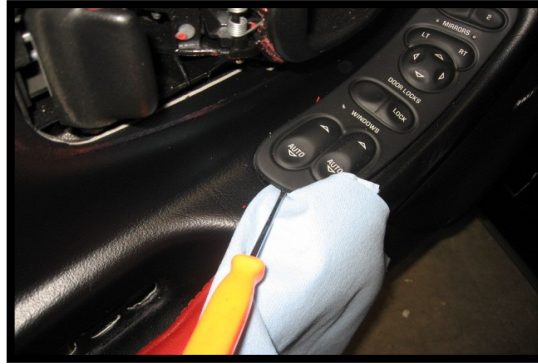

Remove drivers side window switch panel by prying up on the **BOTTOM** of the panel as shown. Remove the passenger side by prying up on the **TOP** OF THE PANEL. You will see 4 small sockets on the drivers side and 2 on the passenger side. Simply turn them 1/8 turn counter clockwise and remove all 6 factory bulbs. Refer to the diagram below for installing the LEDs.

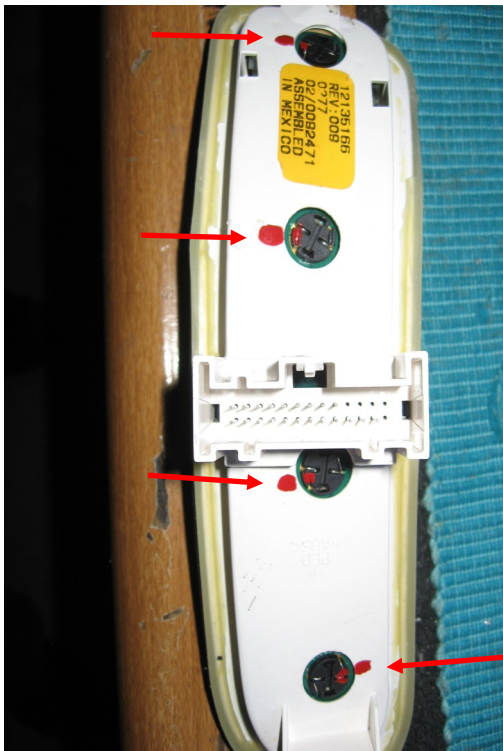

A pair of hemo-stats with toothed jaws works well for removing the sockets if you need to turn them.

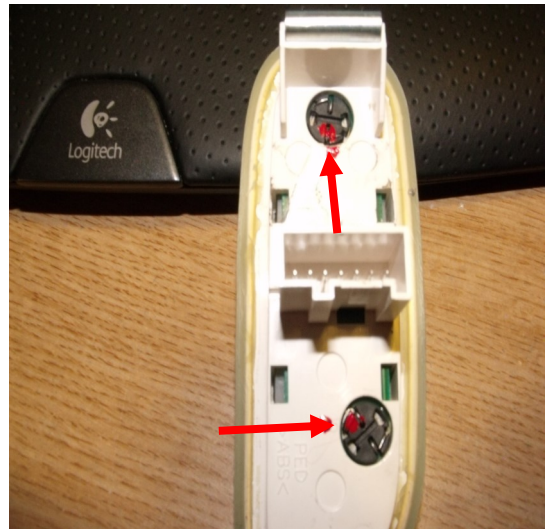

This shows the passenger side leds after they have been turned 1/8 turn into position. Top led in the 6 o'clock position and the bottom one in the 9 o'clock position. Plug the switch in and test the leds. Hook the bottom of the switch into the door panel and snap switch back into place.

This picture shows the led position after they are turned 1/8 turn into position. The top 3 leds will have the red dot facing left in the 9 o'clock position and the bottom one is on the right in the 3 o'clock position. Using your thumb, press the leds into place firmly. Using a flat bladed screwdriver that fits the slot well, twist clockwise 1/8 of a turn until it locks into place. Plug in the switch panel and test to make sure leds light. If they don't, remove it and turn the led 180 degrees and re test.

After all leds are working replace panel and snap back into place.